KCM161xQx



- · Designed for non-grounded networks with Frequency Converters
- Direct connection up to 690V line voltage, up to 1,4kV with HV Adapter for both single or three phase systems
- Monitoring during both live and standby conditions
- For use in land, marine and offshore installations
- Complies with IMCA D 045 Code of Practice
- Parallelling Disable Function
- Immune to earth capacitance and voltage surges
- Analogue output proportional to meter reading (F-version)
- Optional Mohm slave indicator

Specifications

KCM161FQx Scale range: $0-1000k\dot{U}-\infty$ (<6M \dot{U}) Network line voltage: Direct 0-690V (40-500Hz) Up to 1,4kV with HV adapter General 100-120, 200-240, 380-415 or Auxiliary Supply: 440-460VAC, 40-70Hz (Fuse 0.5A) Optional Voltage: 12-24, 48 or 110VDC (Fuse 2A) Supply tolerance: ± 10% 1,5VA Power rating: AC: 100VA - 250V/2A max. Contact rating: DC: 50W - 100V/1A max. Analogue Output: Up to 20mA, max 500R Up to 10V, min 100kohm F-versions (other on request) -20 to +70°C Temperature: Weight: 0.6kgs Front protection: IP21

INTELLIGENT SETTING ASSISTANCE

KCM161xQx has a built-in Assistance tool for setting/verification of the trip levels and the analogue output.

When either the **Warning** or **Alarm potmeter** on the front is operated by user, the slave meter goes into **Assistance Mode** and meter reading and analogue output will reflect the potmeter setting.

How to set alarm levels:

Firstly adjust potmeter fully clockwise (see that meter goes to the top), then adjust potmeter down to required **Warning** or **Alarm** setpoint. In this mode, the Alarm or Warning LEDs (depending on which potmeter is adjusted) will flash quickly Red/Yellow.



Without any movement of potmeters, the meter will revert to normal Insulation Monitoring Mode after approximately 10 seconds.

How to test analogue output signal:

Adjust any trip level potmeter to activate Assistance Mode. **Example:** On a 4-20mA output, adjust potmeter fully anti clockwise for 4mA and fully clockwise for 20mA.

The KCM161xQx range is designed to comply with specification IMCA D 045 "Code of Practice for the Safe Use of Electricity Under Water" issued by IMCA.

Application

The digitally controlled KCM161xQx is designed to monitor the insulation level between a nongrounded (IT) AC mains and its protective earth in systems with frequency converters . The unit is for land, marine and offshore use.

An AC or DC auxiliary voltage is required for the unit, if powered from a separate source the network can also be monitored during inactive (standby) conditions. Only **ONE** KCM161xQx can be connected to each IT-system. The ohmmeter and the triple-zone status LEDs give at a glance the clear safety message:

-ALARM (red zone)



- HEALTHY (green zone)



General

IDV MEASURING PRINCIPLE

Insulation is measured between the complete galvanically interconnected AC network and its protective earth. The unit injects a DC measuring signal into the monitored system. The signal flows to ground via the path of the insulation fault, the level of flow indicates the insulation resistance. The measuring accuracy is not influenced by any normal kind of load attached to the AC network.

This unit is used for any land, marine or offshore installations. Start of monitoring function is delayed when auxiliary power is switched on (default 10 secs delay). The unit has minimum of 9 seconds detection time for any insulation fault.

Trip levels and delays are settable on unit rear. A trip LED flashes when the trip level is passed, the relay trips when the delay has elapsed. The timer resets if the fault is removed during countdown.

MEGGER SAFE

When auxiliary power is **OFF** the unit input is automatically protected against "megger" test voltages up to 1.4kVDC, and incorrect measurements caused by the unit's input impedance are avoided.

OUTPUTS

The KCM161FQx has an isolated **analogue output** proportional to meter reading. If output is used for remote meter reading, we recommend 0-1mA for the slave indicator.

SAFETY

When a voltage adapter (CHx) is used the signal to terminals 4 and 6 on KCM161xQx is limited to a safe level, avoiding any dangerous voltage exposure to personnel.

HIGH VOLTAGE ADAPTOR

Voltage Adaptor CH163-1,4 is used for Insulation Guard KCM161xQx when the monitored line voltage is higher than 690VAC.

The unit meets IEC60092-504 and the relevant environmental and EMC tests specified in IEC60068/60092 and IEC61000/60533 respectively, to comply with the requirements of the major Classification Societies.

Norway
Denmark
United Kingdom



Description

KCM161EQ & KCM161FQ - KCM161EQG & KCM161FQG

This unit is used for industrial, marine and offshore installations with frequency converters. Start of monitoring function is delayed when auxiliary power is switched on (default 5 secs delay).

The unit has a detection time of 6-9 seconds for any insulation fault.

Direct connection up to 690V line voltage. Up to 1,4kV via HV adaptor CH163/1,4.

Relay Operation

Scale range: $0-1000k\Omega - \infty$ (>6M Ω)

 
Relay	Warning	Alarm	Fail Safe	Latch
R1	X			
R2		Х	X	*X
R3		X		*X

<u>Model</u>	<u>Latch</u>	Output	
CM161EQ		-	
CM161EQG	* X	-	
CM161FQ		X	
CM161FOG	Y	¥	

Coloured sectors show recommended areas of settings: - Indicates alarm trip zone - Indicates warning trip zone - Indicates healthy zone

Range (slave indicator)

Output diagram



Output table (example for 4-20mA)

Value (scale)	mA output
0kΩ	20.00mA
10kΩ	15.22mA
20kΩ	12.32mA
30kΩ	10.61mA
50kΩ	8.68mA
100kΩ	6.69mA
300kΩ	4.98mA
1ΜΩ	4.28mA
Open (>6MΩ)	4.00mA



High Voltage Adaptors up to 1,4kVAC for KCM161xQx series

- HV Adaptor for AC Insulation Guards
- CH163x series, up to 1400V Line Voltage live or non-live (standby)
- Creates safety barrier from live HT network to LV switchboard
- Limits measuring output signal to safe levels
- No restrictions on distance between adapter and LV switchboard

Voltage Adaptors CH163x series are used for Insulation Guard KCM161xQx when the monitored line voltage is higher than 690VAC. These adapters are a passive low-pass filter for use in 50, 60 or 400Hz networks, and are potted in polyurethane.

These units includes high inductance reactance modules, connected in a special configuration to avoid DC saturation. Connection to the star-point (Neutral) is Preferable. These adapters maintain a high AC suppression of its signal output to very low, safe levels, under all conditions.

Caution

Terminal 1 must be disconnected during "megger" test.



CH163/1,4 up to 1.4kVAC

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.








KCM161xQx

Connection

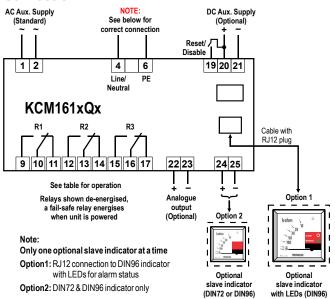

Analogue Output

KCM161FQ and **KCM161FQG** have an analogue output proportional to meter reading. (Special outputs are available on request)

Add suffix from table below to type designation to specify output required:

O/P1	0 - 10mA	O/P6	N/A
O/P2	0 - 20mA	O/P7	N/A
O/P3	4-20mA	O/P8	0 - 10VDC
O/P4	N/A	O/P9	N/A
O/P5	N/A	O/P10	N/A

Reset / Parallelling Disable Function


KCM161xQx has a built-in disable function. When connecting two or more IT-networks together **only one unit** can be active, the other(s) must be disabled. When unit is disabled the power led will flash every 2 seconds to indicate that unit is inactive.

Use a potential free contact on terminal 19 & 20 to activate the disable function (after 2 secs). When activated the measuring input terminal 4 will be internally disconnected.


A pulse (60mS - 2 secs) on terminal 19 & 20 will only reset any latching alarm.

Connection


NEUTRAL VOLTAGE INPUT

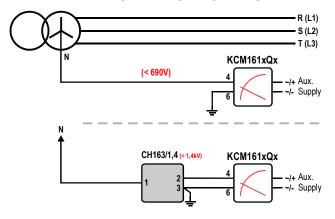

LINE VOLTAGE INPUT

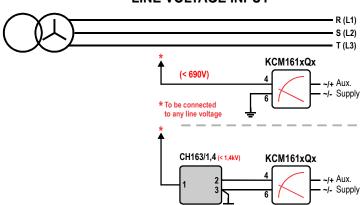

The instrument will detect earth fault on all phases independent of which phase is connected to terminal 4.

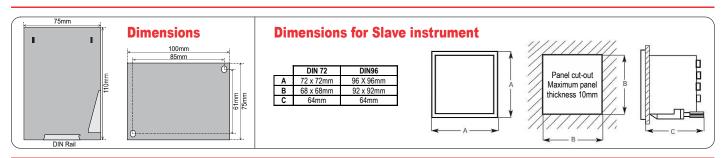

The MEGACON policy is one of continuous improvement, consequently equipment supplied may vary in detail from this publication.

ORDERING EXAMPLE:

 Type:
 KCM161FQ

 Aux. Supply:
 200-240VAC

 Network Voltage:
 690VAC

 Analogue O/P:
 (O/P3) 4-20mA

 Range:
 0 - 1000kohm



Norway
Denmark
United Kingdom

 $C \in$